

## TNSA\_LISTA RICAMBI

Ricambi	Spare parts	Ersatzteile
---------	-------------	-------------

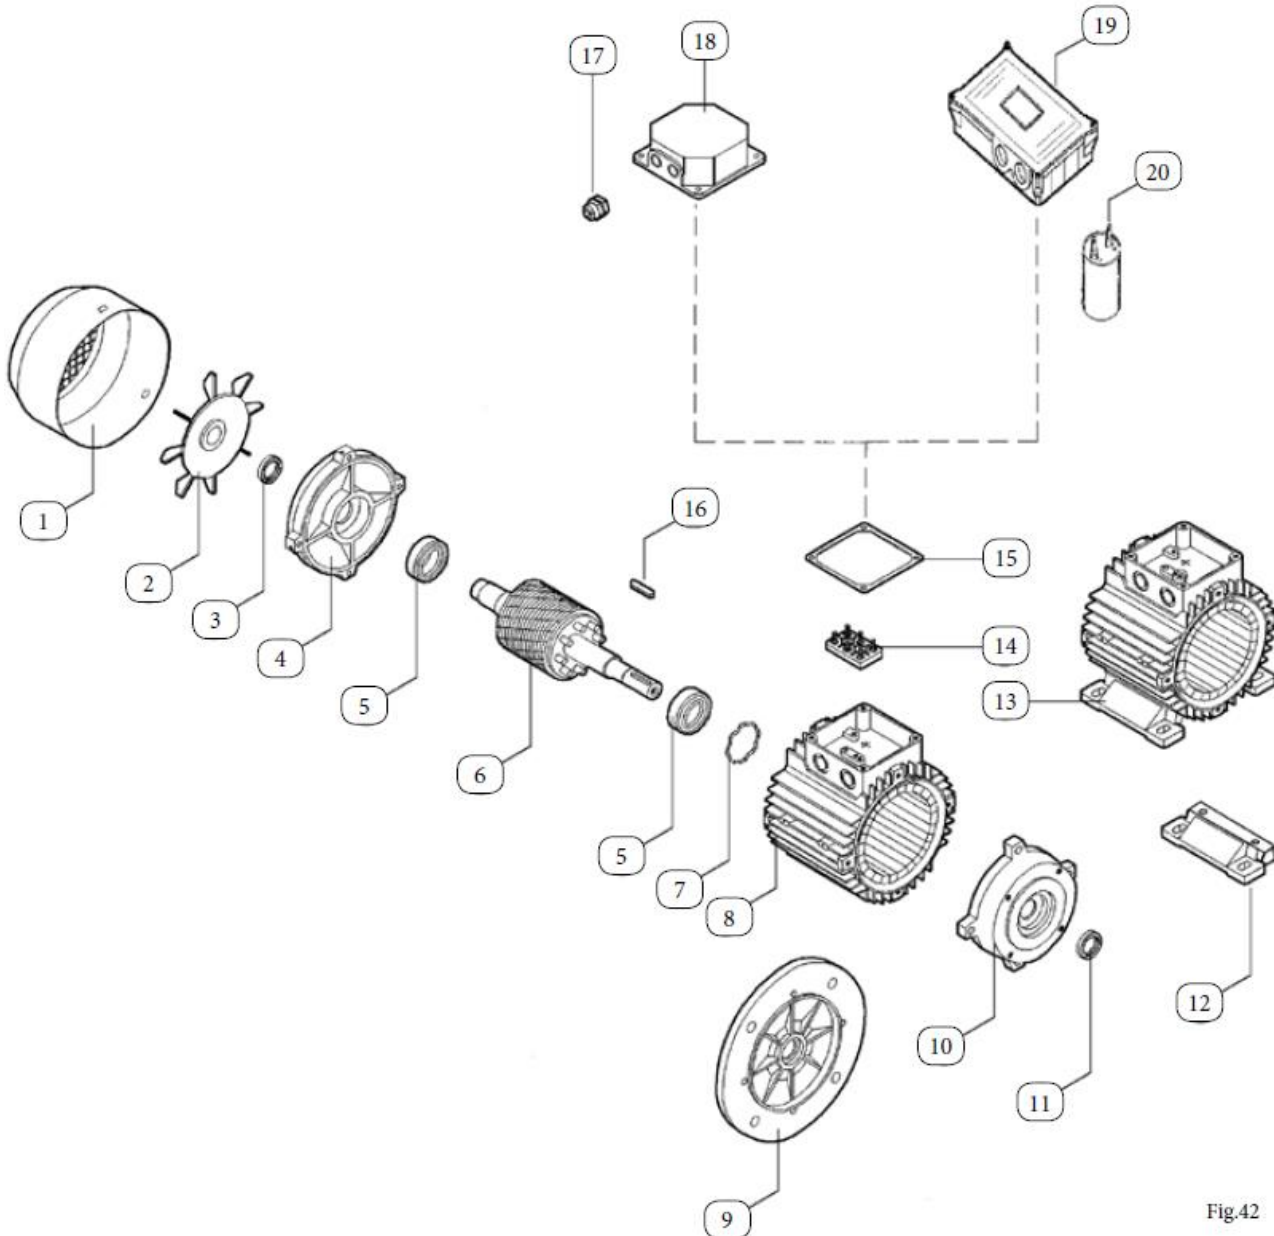


Fig.42

Taglia Size Größe	55	56	63	71	80	90	100	112	132	160	180	200	
Cuscinetti Bearings Lager	5	6201-2Z	6201-2Z	6202-2Z	6003-2Z	6204-2Z	6205-2Z	6206-2Z	6306-2Z	6308-2Z	6309-2Z	6310-2Z	6312-2Z

## TNSA\_LISTA RICAMBI

Ricambi	<i>Spare parts</i>	Ersatzteile	
Nr.	Ricambio	<i>Spare parts</i>	Ersatzteil
1	Copriventola	<i>Fan cover</i>	Lüfterhaube
2	Ventola	<i>Fan</i>	Lüfter
3	Anello di tenuta	<i>Sealing ring</i>	Dichtungsring
4	Scudo posteriore	<i>Rear shield</i>	Hinteres Schild
5	Cuscinetto	<i>Bearing</i>	Lager
6	Rotore	<i>Rotor</i>	Rotor
7	Molla precarico	<i>Preload spring</i>	Feder Vorspannung
8	Carcassa con statore avvolto	<i>Casing with wound stator</i>	Gehäuse mit umwickeltem Stator
9	Flangia B5	<i>Flange B5</i>	Flansch B5
10	Flangia B14	<i>Flange B14</i>	Flansch B14
11	Anello di tenuta	<i>Sealing ring</i>	Dichtungsring
12	Piedi riportati	<i>Foot</i>	Fuß
13	Carcassa con piedi integrali e statore avvolto	<i>Casing with integral feet and wound stator</i>	Gehäuse mit vollständigen Füßen und umwickeltem Stator
14	Morsettiera	<i>Terminal board</i>	Klemmenbrett
15	Guarnizione	<i>Gasket</i>	Dichtung
16	Linguetta	<i>Feather key</i>	Feder
17	Pressacavo	<i>Cable gland</i>	Kabelverschraubung
18	Scatola morsettiera	<i>Terminal board box</i>	Klemmenkasten
19	Scatola morsettiera monofase	<i>Single-phase terminal board box</i>	Klemmenkasten einphasig
20	Condensatore	<i>Capacitor</i>	Kondensator